

Automatic Air Vent

(N 05 345)



Features and benefits

- Construction Features
 - brass body
 - maximum operating pressure: 16 bar
 - maximum operating temperature: +110 °C
 - air outlet: 1/4" flare connection
 - check valve attachment provides costsavings and increases convenience
- Installation and Maintenance
 - Automatic Air Vents should be installed vertically in the highest point of the system, after flushing all the debris
 - for the first use turn the cap (anti-clockwise) for quick filling
 - carry out regular inspections and do not remove the cap during operation
 - maintenance needs t obe carried out only when the system is cold

Part No.	D (")
DMAAV38	3/8
DMAAV12	1/2
DMAAV34	3/4